 


**Titan**

**TP-Carina**  
***MASSAGE CHAIR***  
Operation Instructions

**SAVE THESE INSTRUCTIONS**

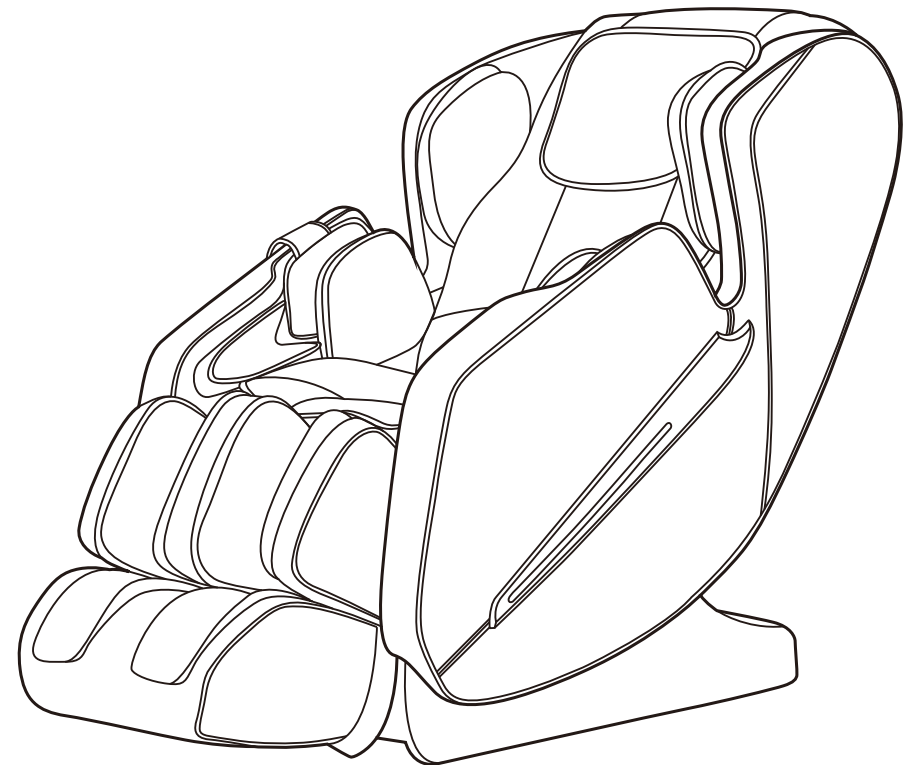

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use.

Note: Our Company reserves the right to revise the design and description of this product without any further notice. Please refer to the actual color of this product.

 
## **CONTENTS**

---

Safety and maintenance	02
Name and function of components	04
Function	05
Method of usage	06
Product specification	13



## Name and function of components

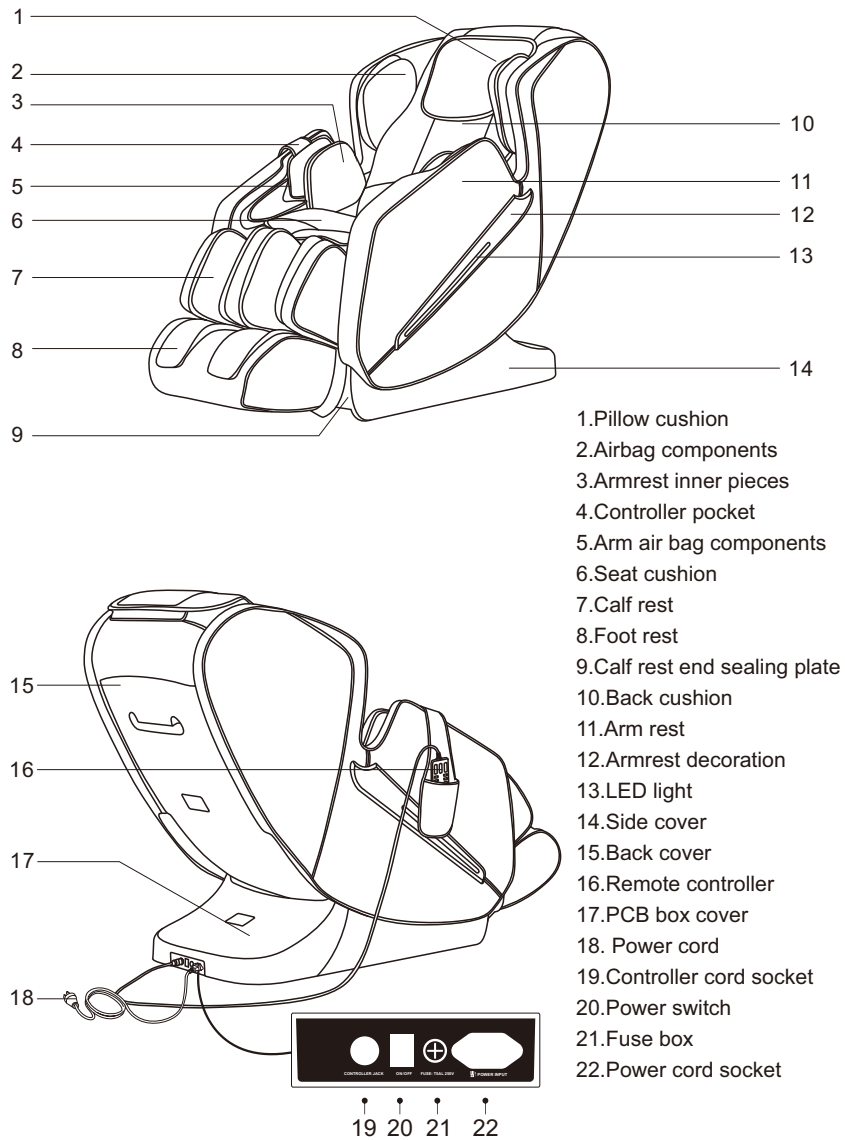


## Function

### Function

- This product is designed with a set of four-wheel driven mechanical massage hands that can move up and down while stretching back and forth.
- Designed with five emulation massage methods of shiatsu, kneading, flapping, knocking, simultaneous kneading and flapping.
- Set with six kinds of characterized auto massage function: relax, comfort, full body, neck & shoulder massage, back & waist massage, stretch.
- Set with three memory function.
- Manually select the type of upper body massage with the five massage point options which include fixed position, partial position, full back, neck & shoulder, back & waist. With three level of speeds for adjustable. In state of fixed position, the massage ball can move up and down to adjust the massage point accurately. In the state of tapping, shiatsu and knocking, the width between the two kneading balls is adjustable with three levels: wide, medium and narrow.
- Air pressure massage function with three modes: full body air pressure, arms air pressure, leg air pressure. with 3 intensity levels adjustable.
- Leg designed with roller massage function. At the bottom of foot, two pairs of papillae on toe root rotating massage; on the arch and heel mastoid skin scraping massage.
- The back heating function uses carbon fiber as an infrared heating source.
- The footrest can be extended to suit different leg lengths.
- Set with calf lift regulating function alone, backrest frame linkage and lift adjustment and three auto-relining mode.
- Backrest frame down slides used technology to deviate from the wall by keeping zero space, reach the maximum space saving.
- L shape back track fitting your body curves, can realize the zero gravity when back down.
- Left and right armrest decoration set up a LED mood lights.
- Armrest with inner pieces adjustment function, move the inner pieces towards to the seat to be max, put your arm inside the armrest to start massage.
- The chair will be reset when switch off. The massage hands will be reset as well.


## Method of usage

 Note: The specific displays refer to the actual object of this product!

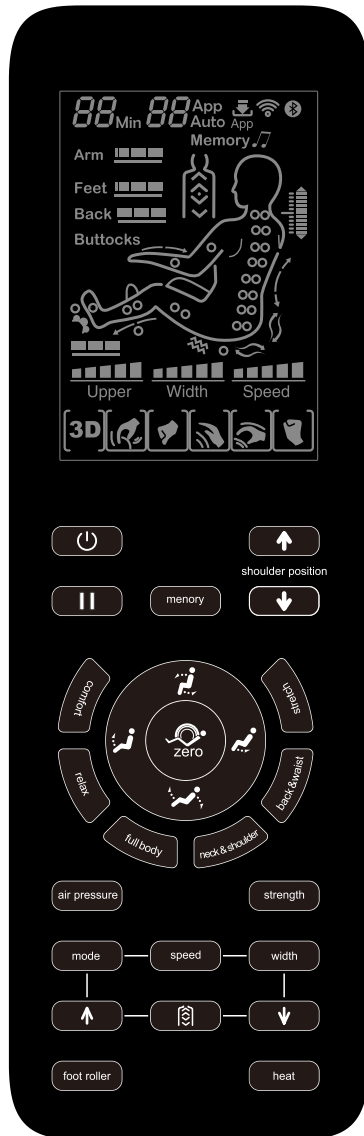

## Method of usage

 
### 1. Switch power supply on

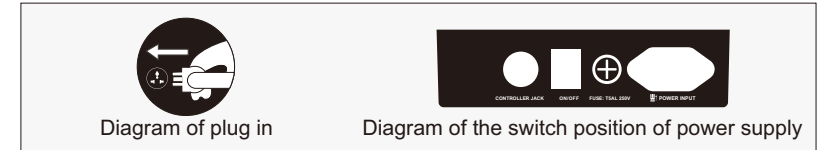

### 2.start massage

- ①、 Press power button, start massage.
- ②、 Automatic shoulder position and massage acupressure point detection, waiting for the completion of testing.
- ③、 If there is difference with the massage balls and the actual shoulder position, you can press the up and down button to adjust the ball to a suitable position. Shoulder position has 10 grades adjustable. It will run automatic massage if there is no adjustment on shoulder position within 10 seconds.

 Button	Description	Display
"Up" Shoulder Position	Press to move the mechanical hands higher to a suitable position.	
"Down" Shoulder Position	Press to move the mechanical hands lower. to a suitable position	

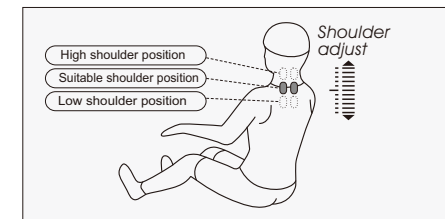

During the detection process of shoulder position and Massaging point, ( remote screen will be show Shoulder position adjustment icon with "bi-bi-bi", press shoulder position button to adjust the position ), can press any Auto mode to start massage ( totally six Auto mode, comfort, ease, full body, shoulder&neck , back&waist, stretch ). or press M1. M2, M3 button to enter memory function (directly skip step 4).







### ④. Choose massage function to massage

- Memory function massage: press memory it will revert to the previous memory massage mode. ( Totally three memory mode, M1, M2, M3)












 

 
 
 


Button	Description	Display
Memory program	Memory	Memory

## Method of usage

### · Characterized auto massage









Function	Button	Description	Display
Characterized auto massage		Loosen body physique	F1 Auto
		Deep massage on acupressure points, effectively alleviate pain	F2 Auto
		Full body massage, relax the paint .	F3 Auto
		Focused on neck and shoulder massage	F4 Auto
		Focused on back and waist massage	F5 Auto
		The calf-rest and back-rest lifting together , combine with air pressure massage to stretch the calf ,which relieve fatigue and revitalizing	F6 Auto

### · upper body manual massage





Function	Button	Massage ball adjustment	Display
Mode		Shiatsu: speed, width	
		Kneading: speed	
		Tapping: speed, width	
		Kneading& flapping : speed	
		Knocking: speed, width3	
Speed		3 adjustable level	
Width		3 adjustable level	
Back Stretch		The massage hands stay in one fixed position	
		The massage hands will move up and down in a partial position	
		The massage hands will move up and down entire back area	
		The hands will move up and down on the back and shoulder area	
		The hands will move up and down on the back and waist area	
		Message position adjust ( in fixed position, partial modes you can adjust the massage position )	Hands move up
		Hands go down	

## Method of usage



### · Air press function

Function	Button	Description	Display
Air press Mode		Full air pressure: air pressure massage on arm, calf and foot part.	Arm  Feet 
		Arm: air pressure focus on arm.	Arm 
		Calf : air pressure focus on calf , foot.	Feet 
Strength		Three intensity adjustable.	Arm  Feet 






### · Foot roller , heat manual function

Function	Button	Description	Display
Foot roller		Foot roller switch , and 3 speed level available.	
Heat		Fair infrared back heating, has warm feeling when it start to work 3 minutes later.	

### · Pause/starts

Function	Button	Description	Display
Pause/ Starts		Press this button during massage process, all the massage function stopped immediately. Press this button again, all the massage product will be restart ( auto stop when massage time out)	

 
### · Backrest and calf position adjust

Function	Button	Description
Calf rise		Press and hold this button to slowly lift the calf rest. Release the button to stop if the calf reached max. Level, it will stop with "di...di" alarming
Calf drop		Press and hold this button to slowly lower the calf rest. If the calf reached max. Level. It will stop with "di...di" alarming
Backrest rise		Press and hold this button to slowly lower the calf rest. If the calf backrest reached max. Level, it will stop with "di...di" alarming
Back rest drop		Press and hold this button to slowly lower the back rest. Release the button to stop. If the backrest reached max. Level, It will stop with "di...di" alarming
Auto lay down mode		With three modes circulation function, when press the button turn into auto lay down mode.

## Method of usage

### 3. Turn off power, stop massage

- Press power button during massage progress, all massage function will be stopped immediately, meanwhile you can set up memory function, the backrest and foot part will reset. Or switch off the chair when massage time finished, you can press the memory function button to storage the massage situation, the backrest and foot part will not reset.
- Memory function : Display with "memory" flashing instructions, press the button ,it start to storage the massage mode doing when stop the chair, the remote screen show 1.2.3, press one to finished it with bi-bi-bi last 2 seconds. Press on/off button again to closed the chair ,the chair will be reset. Or waiting 10seconds, automatically stopped, the chair will be reset.

Button	Description	Display
Memory program		Memory

- Cut off the power of the whole machine.  
Figure (Switch power off)



### 4. Calf installation

- The install hole of rail shelf (chart 1).
- Place the isolation sleeve on both sides of the calf hook. (Outside) (chart2).

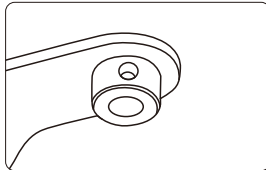 


Chart 1

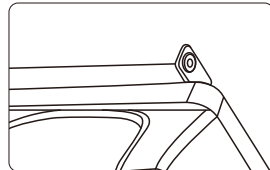 


Chart 2

- Place the flat washer into the pin shaft. (chart3).
- Calf hooks install hole and rail shelf install hole should be aligned, insert the pin with a flat washer(both sides are required to be inserted). The pins are aligned with the screw holes for easy installation. (chart4).

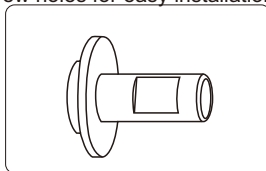 


Chart 3

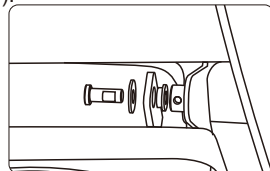 


Chart 4

## Method of usage

- Use the Allen wrenches lock two hexagon socket head screws. (chart5).


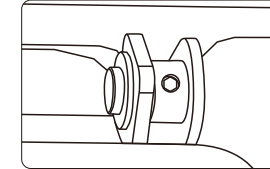 



Chart 5

### Note

 - When the machine under the working state, with lying and calf rest lifting, you could not apply gravity on the calf, to prevent the massage chair does harm to people before dumping (chart1).
- Ensure the mechanism hands not in the seat part ,otherwise will cause uncomfortable in the Buttock when you seating in the chair (chart2).

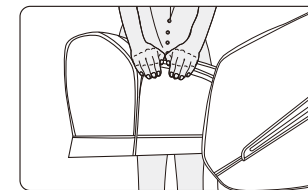



(chart1)

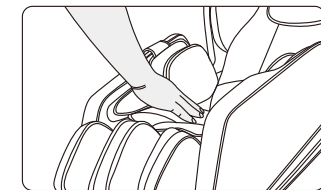 


(chart2)

### 5. Head cushions and backrest pad's dismounting and use manual

  - Foldable pillow pad. The users can choice the number of layer to find the best intensity of back massage.
- Separate the head pillow to fall down to the back to reduce the intensity of back massage.
- Backrest cushion and backrest connected by zipper (1), head cushion and backrest pad connected by thread gluing (2)

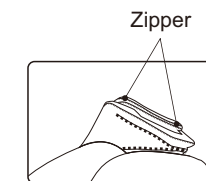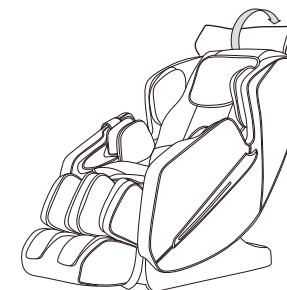

 (1)

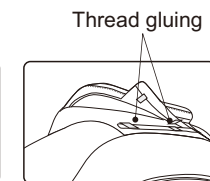


(2)

## Method of usage
 
### 6. Floor Protection


- Put the heavy massage chairs on the wood floor for a longtime may damage the floor, so please place a carpet or other object to avoid this damage.

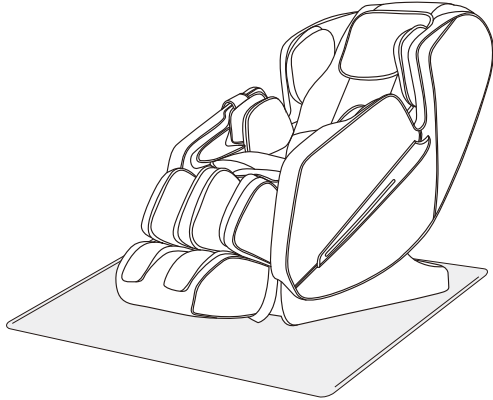

Caution: Do not move the chairs with its wheels on wood floor, rough ground or in a narrow space. Two people are required to lift the chair. During the lifting period, take the calf sealing board and backrest cover grooves as the focal point(Please do not lift armrest Directly.)

### 7. Method of movement

 Press the remote button to make the calf to be lifting to the highest level, then turn off the power switch, unplug the power wire, remote controller wire. Hold a groove in the back plastic cover to tilt the backrest backward to a certain degree (with the gravity center resting on the wheels), push the chair forward or backward with your hands and finally resume the chair to the normal position in a slow and gentle manner.

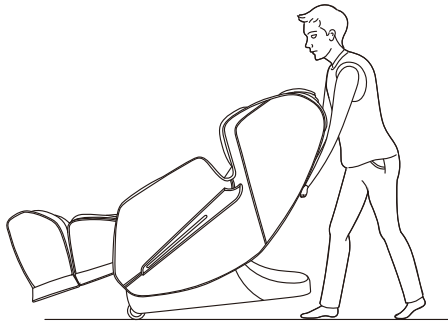

Note: During movement you must turn off the power switch first and then unplug the power line and hand controller connecting line.

## Product specification

Model: TP-Carina

Name: Massage Chair

Rated voltage: 110-120V~ 60Hz   
 220-240V~ 50Hz/60Hz

Rated power input: 150W

Rated time: 20Min

Safety structure: Class I

Material introduction: PVC, PA, steel parts and electric & ele-ctron parts

MATERIAL	PU	LEATHER	CLOTH	WOOD